



# HS Electronics


Repairs & Maintenance of Industrial Electronics Control Systems, Machines & Equipments

Regtd. Office : Flat 205, C-46, Yogi Star CHS Ltd, Yogi Nagar, Borivali (W), Mumbai – 400091

Workshop : Shop No. 12, B/6, Sector 09, Shanti Nagar, Mira Road (East), Thane - 4001107

Tel: 24791881, Fax: 28331592 Cell: 09324326385

E-mail : sales@hira.co.in \* Website: [www.hira.co.in](http://www.hira.co.in) , [www.hselectronics.co.in](http://www.hselectronics.co.in)

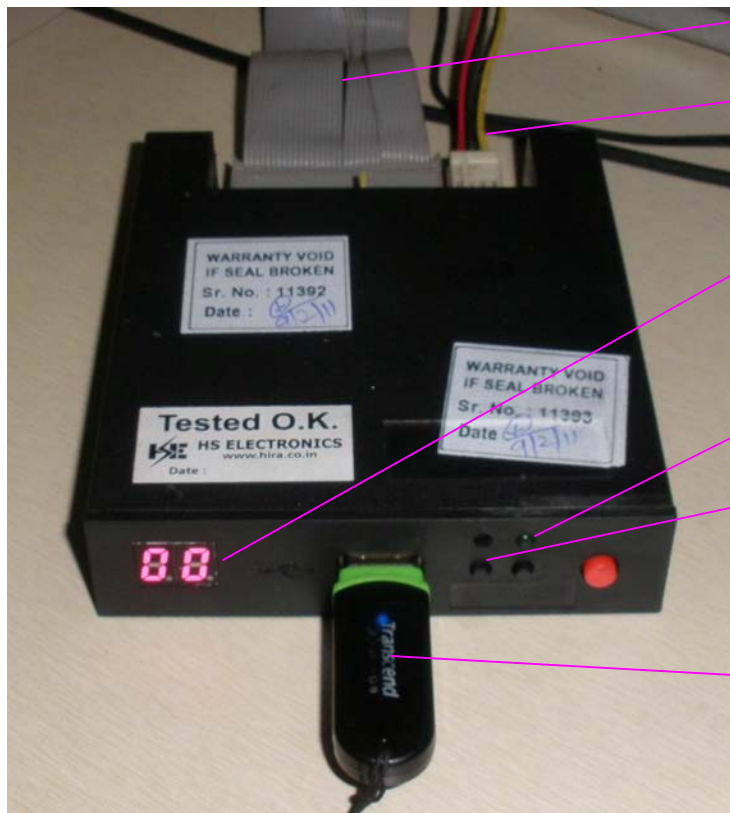

Floppy Cable Connector (As in Existing Floppy Drive)

Floppy Power Cable (As in Existing Floppy Drive)

2 Digit 7 Segment Display of current Diskette Number  
(00 to 99)

00 means Floppy 00

01 means Floppy 01 upto 99

Green LED for Floppy Reading Indicator (As in existing Floppy Drive)

Selection button for Selection of Desired Virtual Floppy

1st Button for Tens (10 – 90)

2nd Button for Units (0 – 9)

Normal USB Pen Drive

The Pen drive is formatted with 100 partition of each 1.44 MB

**Note :** This USB Floppy is competable wirh MS DOS, Win 3.11, Win 95, Win NT, Win CE, Win 98,, Win ME, Win 2000, Win XP, Embedded XP, VISTA, Windows 7, Linx, Unix, Dr. Coldera DOS, VDOS, IDOS, and many more.  
It works on All CNC machine, DCS System, Mark-V, Embriodery Machine, etc